


PYRAMID

22137 Yamaha MT-07 Fly Screen Fitting Instructions

Kit includes:

2X M6 X 50mm Counter Sunk Bolts	CBOL0246
2X M6 Counter Sunk Black Washer	CWAS0200
2X Black Spacer	CSPA0012
1X Velcro Tabs	C09000

- Remove OEM bolts from mounting points shown in **Fig 1**.
- Align the fittings supplied with the Pyramid Fly Screen as shown in **Fig 2**.
- Fit the Pyramid Fly Screen to the mounting points mentioned in **Fig 1** using the assembly shown in **Fig 2**.
- Remove backing tape from Velcro Tabs on the underside of the Pyramid Fly Screen and press down firmly on the front corner to create contact.

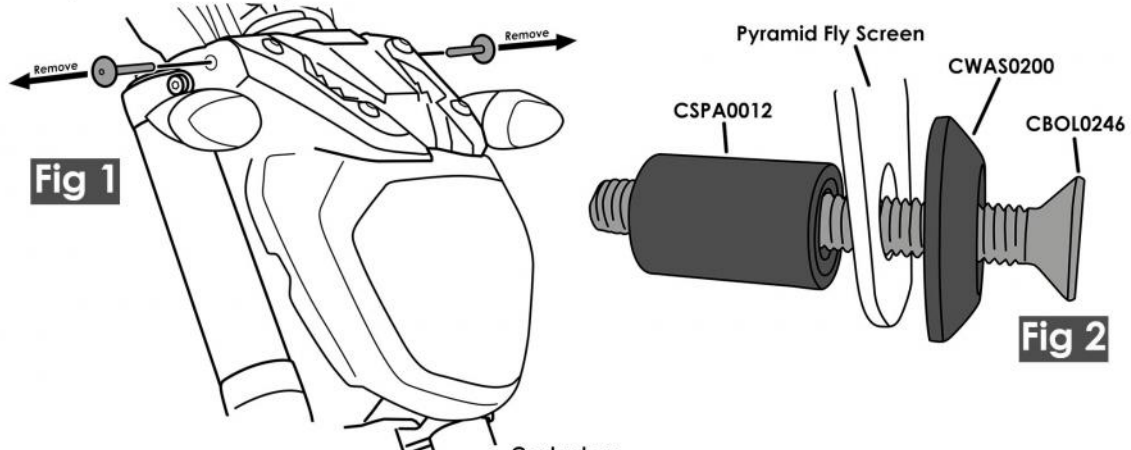

Contact us:
sales@pyramid-plastics.co.uk - +44 (0)1427 677990 - www.pyramid-plastics.co.uk

Follow us on social media and feel free to leave us a review!




PYRAMID

22137 Yamaha MT-07 Fly Screen Fitting Instructions

Kit includes:

2X M6 X 50mm Counter Sunk Bolts	CBOL0246
2X M6 Counter Sunk Black Washer	CWAS0200
2X Black Spacer	CSPA0012
1X Velcro Tabs	C09000

- Remove OEM bolts from mounting points shown in **Fig 1**.
- Align the fittings supplied with the Pyramid Fly Screen as shown in **Fig 2**.
- Fit the Pyramid Fly Screen to the mounting points mentioned in **Fig 1** using the assembly shown in **Fig 2**.
- Remove backing tape from Velcro Tabs on the underside of the Pyramid Fly Screen and press down firmly on the front corner to create contact.

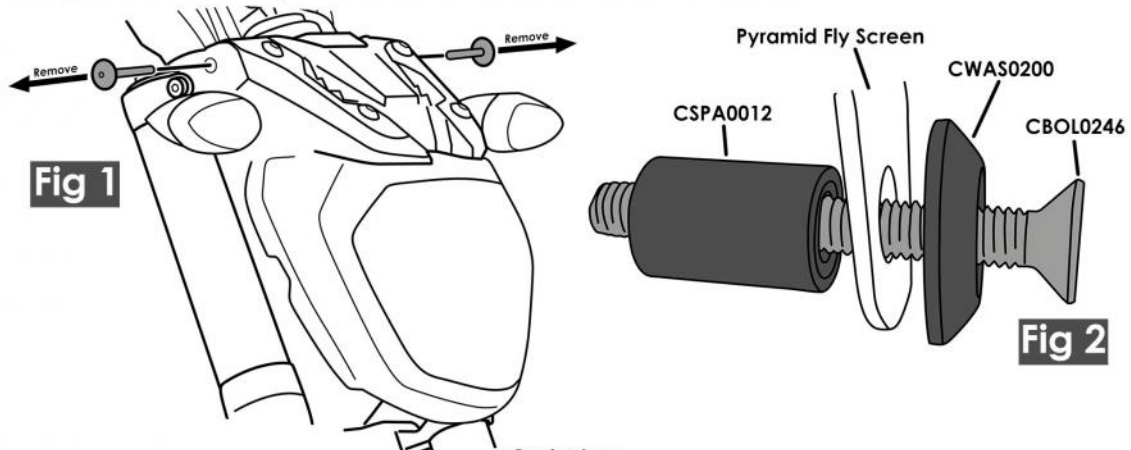

Contact us:
sales@pyramid-plastics.co.uk - +44 (0)1427 677990 - www.pyramid-plastics.co.uk

Follow us on social media and feel free to leave us a review!

