





Fitment method A


| Push-Rivet | Extenda Fenda & Hugger Extension Fitting Instructions

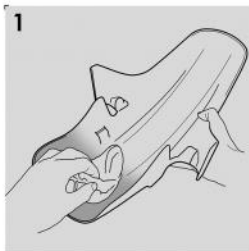


Remove mudguard from bike & clean inside.

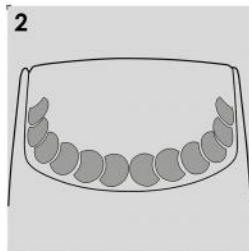


Attach a few Slick-Fit pads to the Extenda Fenda/Hugger Extension in area shown to create a gasket.

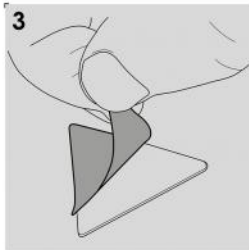


Peel backing paper from Slick-Fit pads.

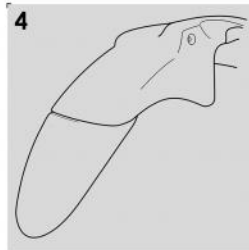

Fit Extenda Fenda/Hugger Extension to mudguard.

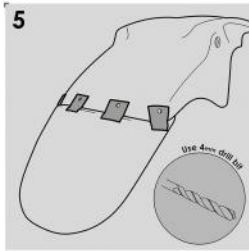

Use masking tape to mark equally spaced drilling points. Drill through the Extenda Fenda/Hugger Extension & mudguard at each point. Use 4mm drill bit.

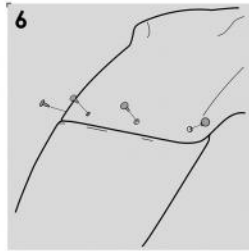

Fit Push-Rivets provided and re-fit mudguard to bike.

Visit 'youtube.com/pyramidplastix' for our video tutorial on fitting a Push-Rivet Extenda Fenda/Hugger Extension

Alternatively you can contact us:
sales@pyramid-plastics.co.uk
+44 (0)1427 677990


www.pyramid-plastics.co.uk

PYR140218




Fitment method B


| Slick-Fit | Extenda Fenda & Hugger Extension Fitting Instructions

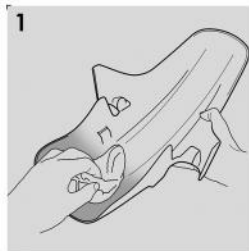


Remove mudguard from bike & clean inside.

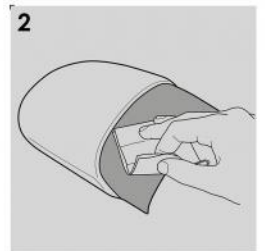


Prime Extenda Fenda/Hugger Extension in area shown with wipe supplied.

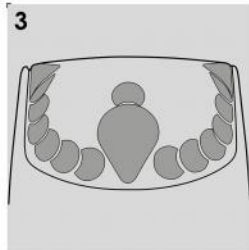

Attach Slick-Fit pads to the Extenda Fenda/Hugger Extension using this diagram as a guide. Avoid recesses & corners in the moulding as this will effect the fit.

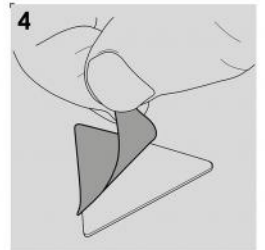

Peel backing paper from Slick-Fit pads.

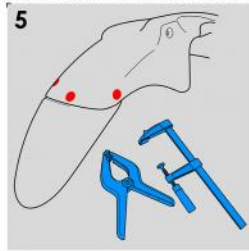

Fit Extenda Fenda/Hugger Extension and apply pressure evenly. Pyramid suggests using clamps as shown in Slick. (Applying pressure on the central and outer edges is crucial).



12hrs

Allow to cure for 12 hours. Re-fit mudguard to bike.

Visit 'youtube.com/pyramidplastix' for our video tutorial on fitting a Slick-Fit Extenda Fenda/Hugger Extension

Alternatively you can contact us:
sales@pyramid-plastics.co.uk
+44 (0)1427 677990

www.pyramid-plastics.co.uk

PYR120418