


## 38885 Moto Guzzi V85TT Handguard Extensions Fitting Instructions

### Kit Includes:


2X	C38885	Mouldings (pair)
2X	CFK38885	Brackets (pair)
4X	CBOLM50005	M5 X 12mm Bolt
4X	CWASM50001	M5 Washer
4X	CNUTM50002	M5 Nyloc Nut
2X	CSPAM60009	Spacer
6X	CRUB0006	Adhesive Rubber Dot

- Remove the OEM handguards from the bike. Attach the handguard extensions to the brackets using the M5 fittings supplied.
- Once the brackets are fitted to the handguard extensions see images below for fitment on the bike.

**Note:** the adhesive rubber dots supplied can be used to protect the OEM handguards from the handguard extensions if necessary (attach on the inside of the bottom edge on the handguard extensions).

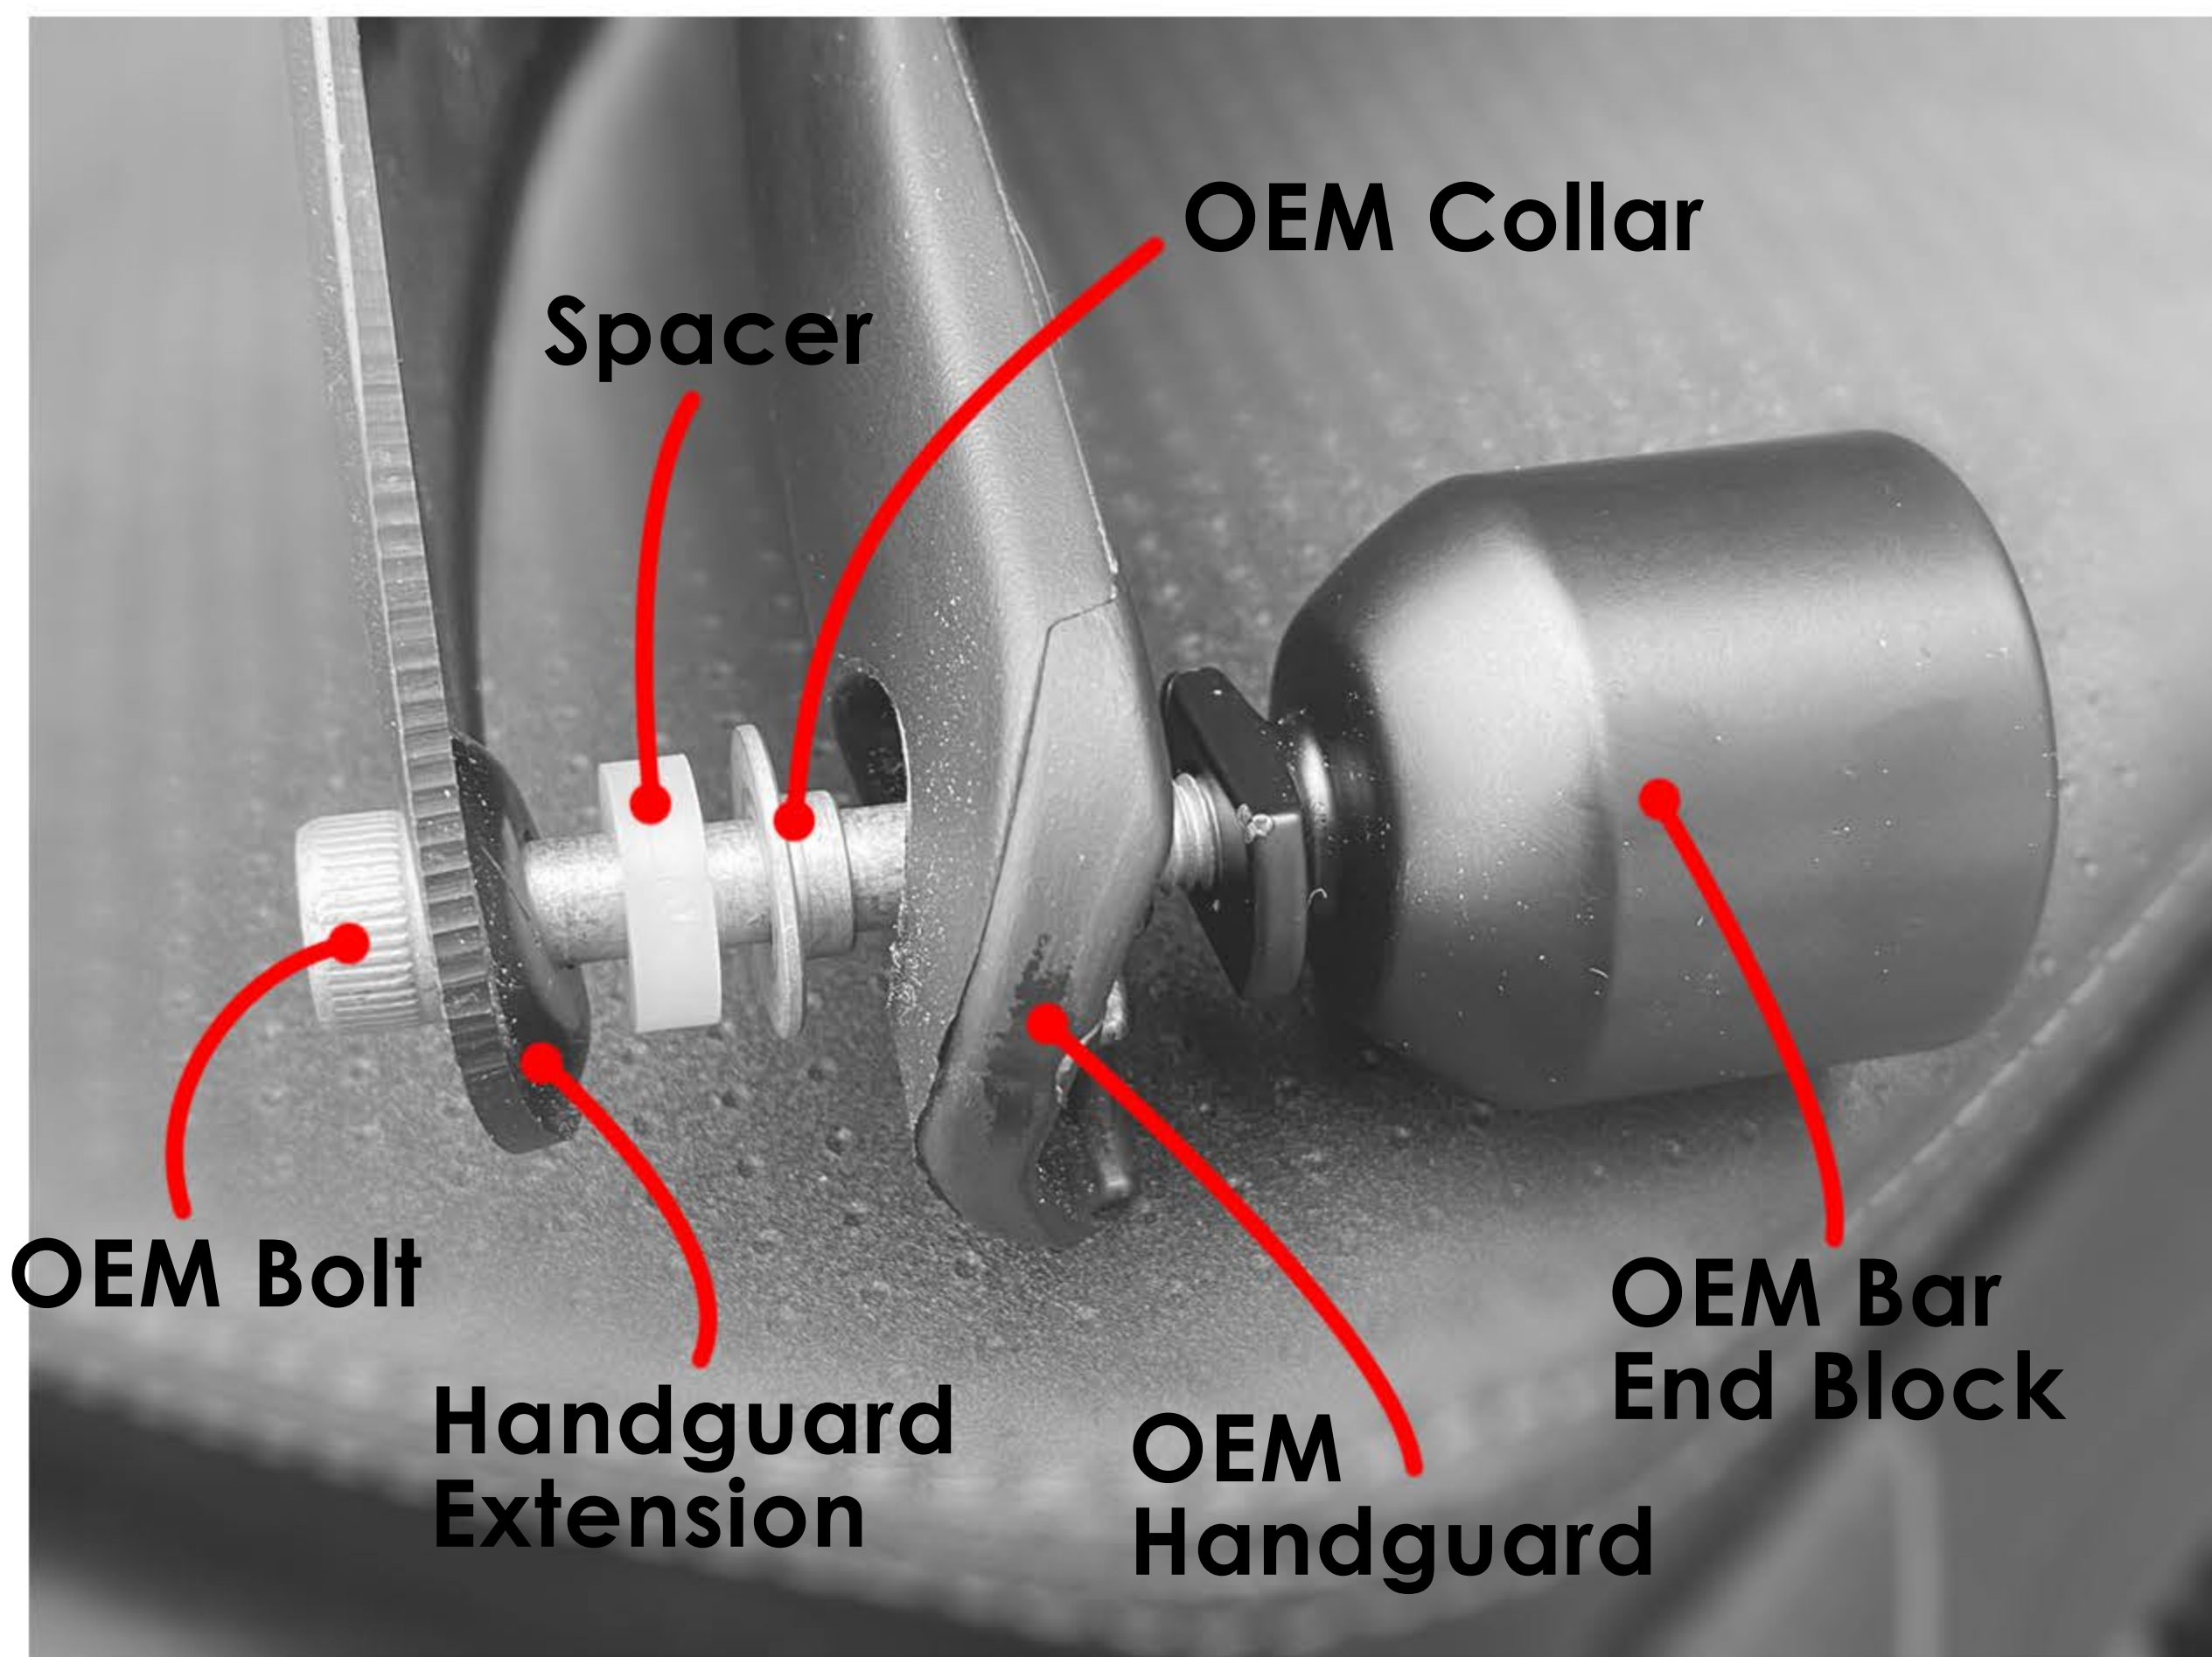

Fitting sequence for the bar end

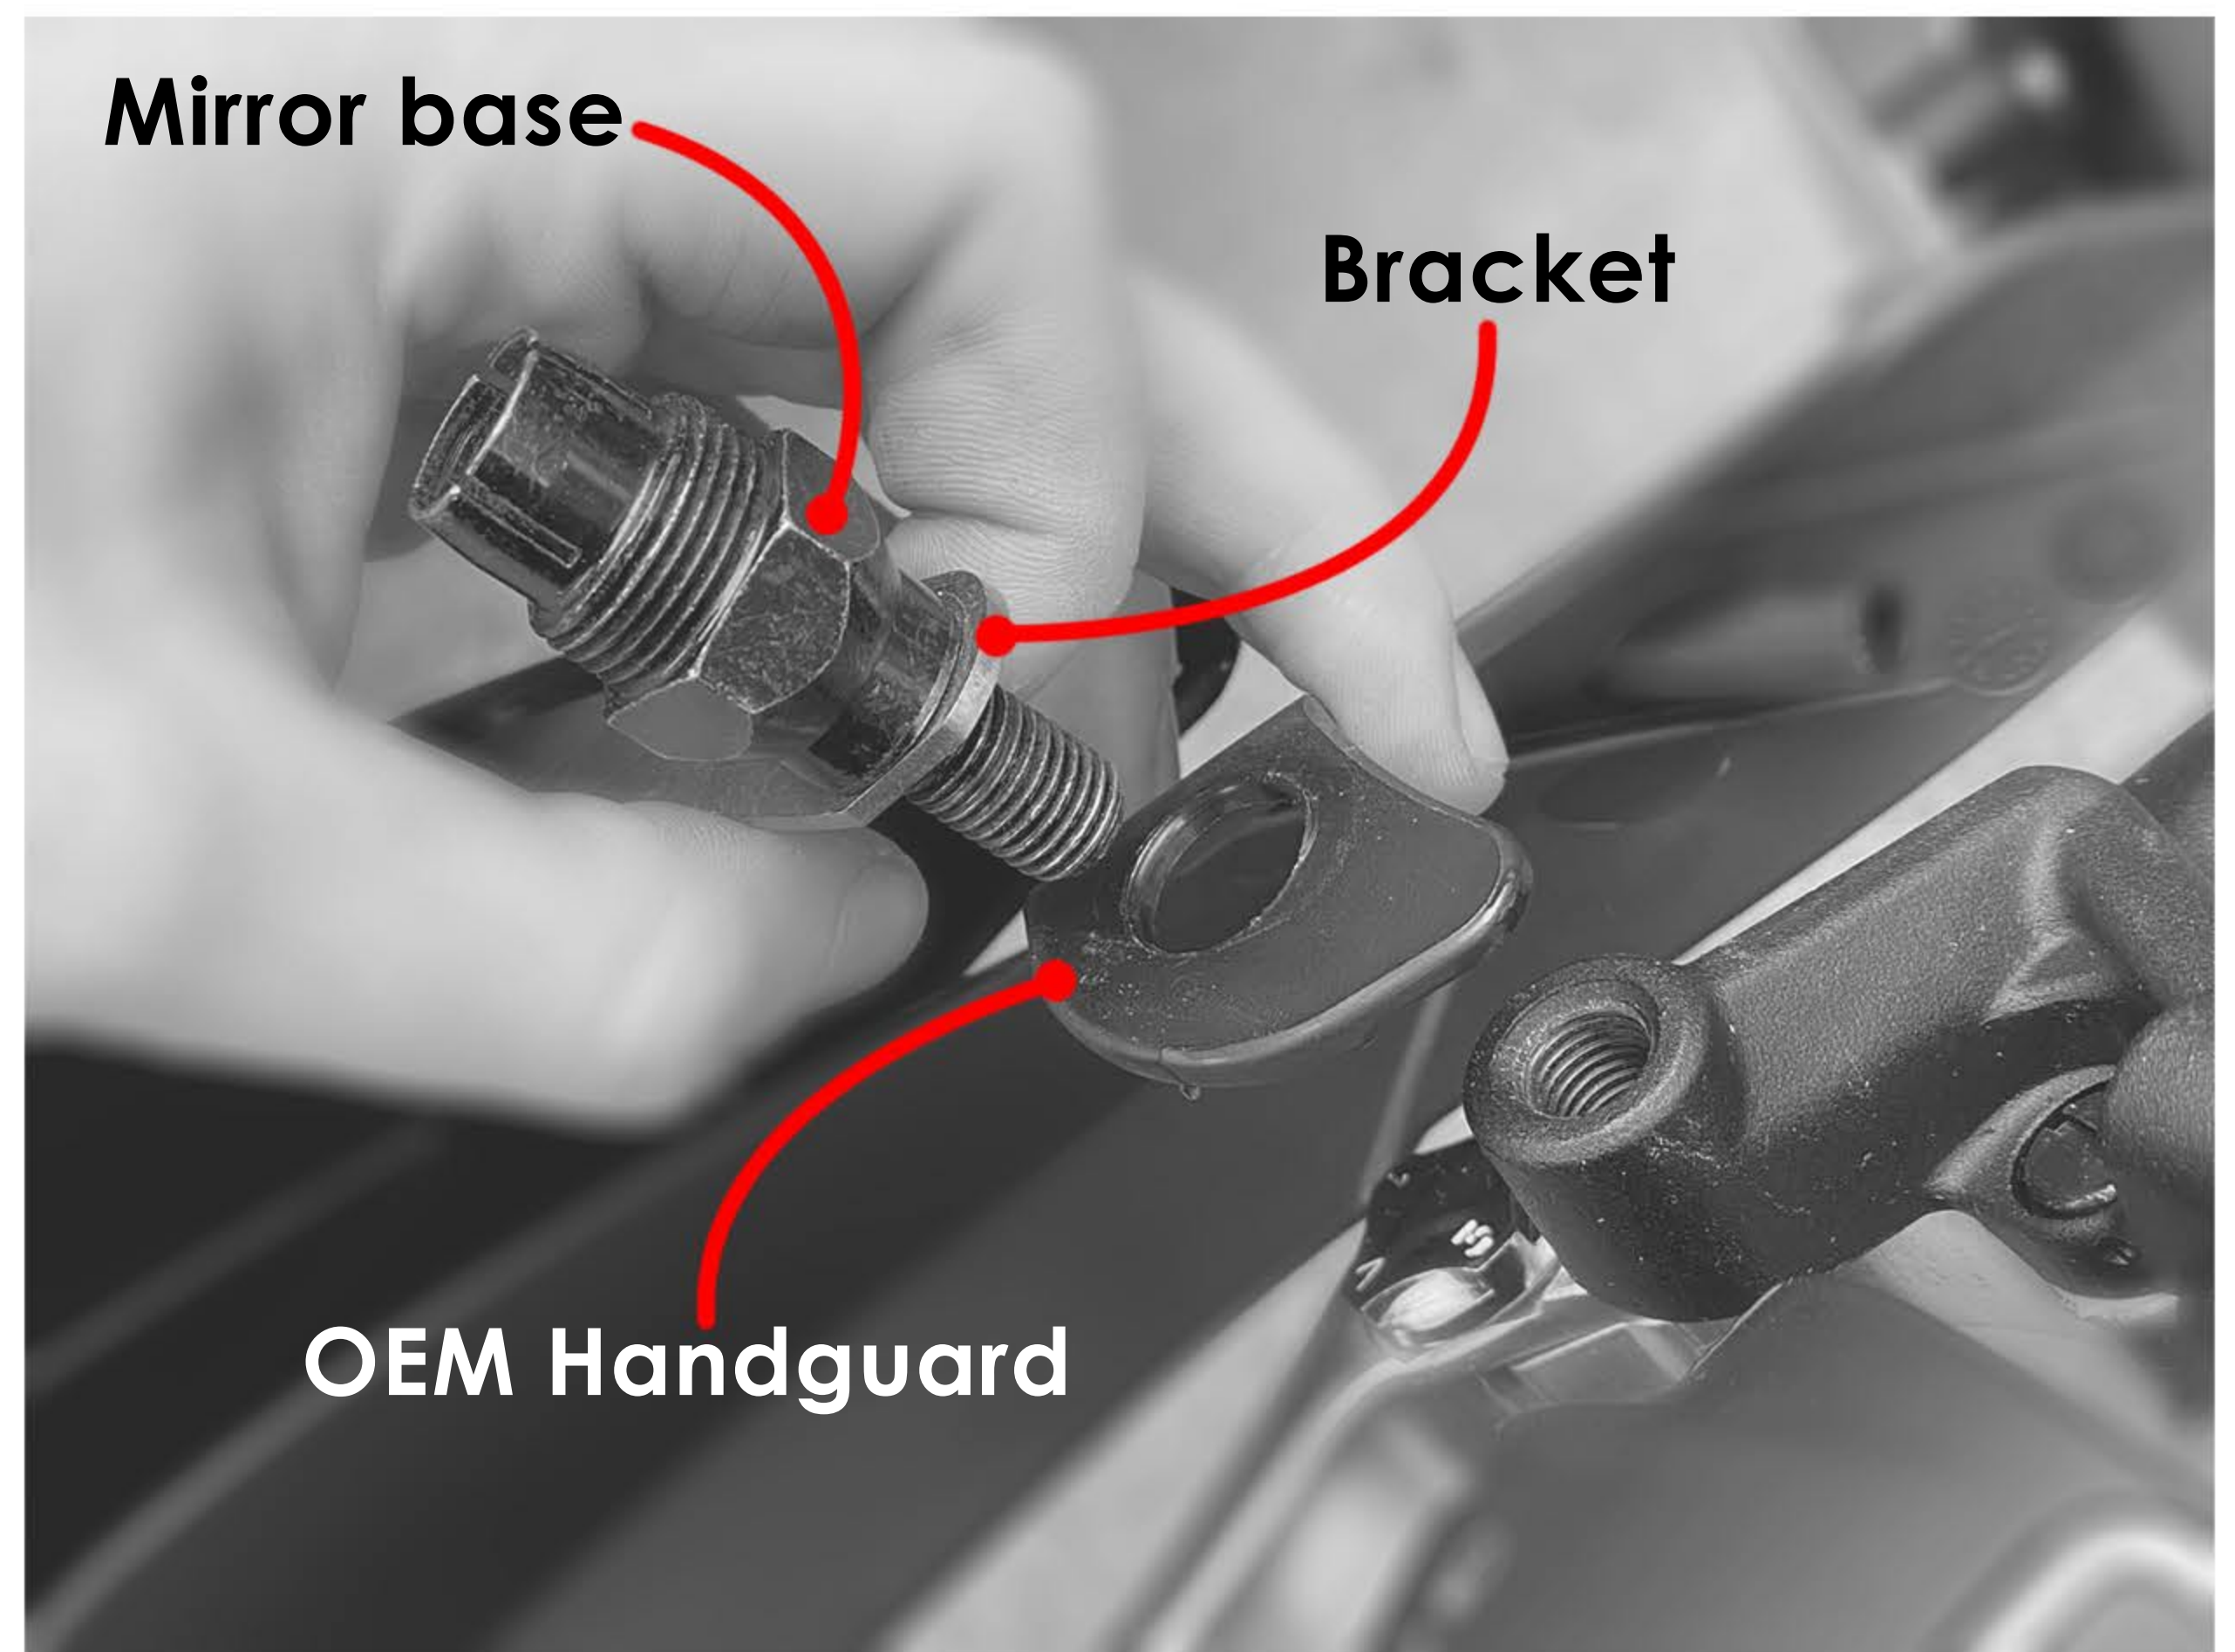

Fitting sequence for the mirror mounting



Fitting sequence for reassembly of the mirror mounting



Any questions?  
[sales@pyramid-plastics.co.uk](mailto:sales@pyramid-plastics.co.uk)  
 +44 (0)1427 677990  
[www.pyramid-plastics.co.uk](http://www.pyramid-plastics.co.uk)

Follow us on social media and feel free to leave us a review!

