

Thank you for purchasing a ZTechnik Product. Please read these instructions carefully and thoroughly before beginning work. Before installing accessory, carefully consider whether one possesses the necessary technical skills and workshop tools to complete the installation properly. Otherwise, any Motorcycle Retailer will be glad to install this accessory.

Dealers, if installing the ZCap for a customer, please give him or her this manual. It contains the instructional and reference material needed to properly maintain and use this product.

The following symbols are used in these instructions:




Special notes and cautionary measures.



Tips for facilitation of operation, control and adjustment, as well as maintenance work.


PARTS LIST

Z5350 Clutch Reservoir Cap, Quantity 1

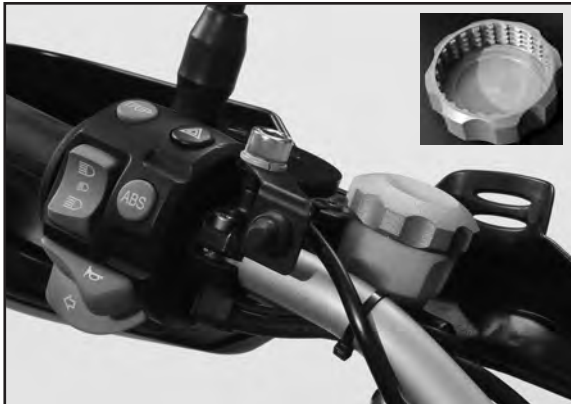

ZCap, Clutch Reservoir Replacement Cap, Machined Aluminum
Fits: R1200 GS

Z5351 Brake Reservoir Cap, Quantity 1

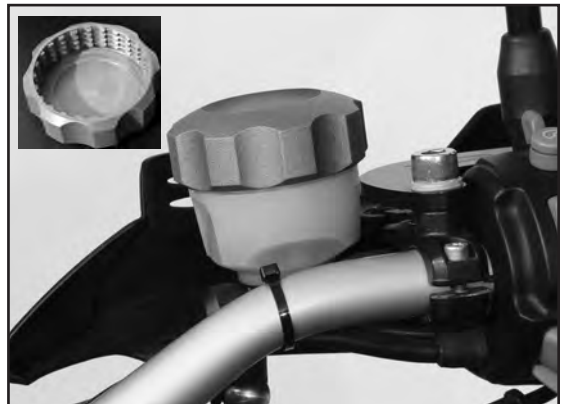

ZCap, Brake Reservoir Replacement Cap, Machined Aluminum
Fits: R1200 GS/F

Z5352 Brake Reservoir Cap, Quantity 1



ZCap, Brake Reservoir Replacement Cap, Machined Aluminum
Fits: S1000 RR

BMW TOOL REQUIRED
BMW Tool, 321 510/511
Clutch Reservoir and Brake Reservoir
Cap removal tool.



Figure 1

PREPARATION

1. Use the specified BMW tool to remove the stock clutch or brake reservoir cap. (**Tool, 321 510/511**) **Figure 1**

INSTALLATION

1. Install the ZTechnik clutch or brake cap.
2. Check brake fluid level. Add fluid if necessary.
3. Tighten firmly.

MAINTENANCE

Clean as you would your motorcycle.